baby alive
AGE 3+
Real As Can Be
BABY
™
CARING FOR YOUR NEW BABY

GETTING STARTED

1 Slide switch on her bottom to ON.

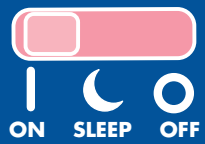

NOTE: To conserve battery life, slide switch to OFF when doll is not in use.

2 Press her left hand to start play.

YOUR BABY'S ACTIVATION POINTS

Have fun exploring all the ways that Real As Can Be Baby responds to your voice and touch. Care for her like your very own baby!

Activation Points

Recognizes Sounds

Real As Can Be Baby recognizes her orientation, and knows when she is being moved, burped, rocked, or bounced.

PLAY TIME

She loves chatting and can babble back!

She looks at you when you talk to her.

She giggles when you tickle her!

Help her blow kisses!

FEEDING TIME

When she's fussy, it's time to eat.

Give her a bottle.

After the bottle, pat her back to help her burp.

Check her diaper.

BEDTIME

She loves sucking her thumb.

Her pacifier soothes her before bed.

Rock her to sleep.

SLEEP MODE

When playtime is over, this soft and snuggly baby can nap with your child. Slide switch to SLEEP and listen to baby's sweet sleepy sounds before she falls asleep. When in sleep mode her activation points will not respond. After everyone is rested up, your child can start the fun again. Slide switch from SLEEP to ON, press left hand and she's ready to play!

TIPS & TROUBLESHOOTING

**After a few minutes of inactivity, your doll will go to sleep.
To wake her, squeeze doll's left hand or insert her pacifier or bottle into her mouth.**

If she's not responding to you, try waiting until she finishes what she's doing.

**If your doll doesn't respond to your voice,
you may need to speak louder or get closer to her.**

If your BABY ALIVE doll isn't functioning properly, it may be time to change the batteries.

IMPORTANT!

Clean only doll's arms, face, and legs by wiping gently with a soft, damp cloth. Do not rub.

Do not submerge doll in water; she is not intended for bath-time play.

Machine wash doll's clothes (cold water, gentle cycle, no bleach). Tumble dry low.

**Hand-wash bottle and pacifier with mild dish soap and water;
they are not dishwasher-safe.**

Only the included bottle and pacifier should be used with your BABY ALIVE doll.

Do not place any foreign objects in doll's mouth or any other opening.

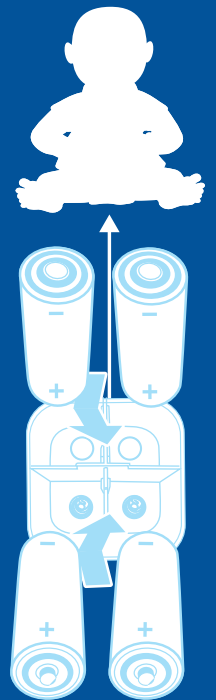

Replace demo batteries with 4X 1.5V AA ALKALINE BATTERIES alkaline batteries. Use a Phillips/cross head screwdriver (not included).

BATTERIES

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. TO AVOID BATTERY LEAKAGE
   a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
   b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
   c. Remove exhausted or dead batteries from the product.
   d. Remove batteries if product is not to be played with for a long time.
   e. Do not short-circuit the supply terminals.
   f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging.
   Recharge batteries under adult supervision.
   DO NOT RECHARGE OTHER TYPES OF BATTERIES.
2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

Product and colors may vary by doll. Retain this information for future reference. © 2017 Hasbro, Pawtucket, RI 02861-1059 USA. All Rights Reserved. TM & ® denote U.S. Trademarks.

Le produit et les couleurs peuvent varier selon la poupée.

Conservez cette information pour référence ultérieure. © 2017 Hasbro. Tous droits réservés.

HASBRO CANADA, LONGUEUIL, QC, CANADA J4G 1G2. US/CANADA TEL. 1-800-255-5516.

E2352 PN00026391